

# **MSD** **IGNITION** **INSTALLATION INSTRUCTIONS**

## **MSD Pro-Clamp Separator Kit PN 8843**

### **Parts Included:**

- 2 - Four wire assemblies
- 2 - Three wire assemblies
- 4 - Two wire assemblies

The top cover of the MSD Separator easily pries off with a medium size flat screwdriver or even a coin. Each wire fits securely in the grooves then the cover snaps back into place.

There is a mounting hole in each Separator so they can be retained with a screw to a bracket. Note the raised tab on the base that will keep the Separator straight when bolting it in place.



**MSD IGNITION** • [WWW.MSDIGNITION.COM](http://WWW.MSDIGNITION.COM) • (915) 857-5200 • FAX (915) 857-3344

FRM28453

© 2007 Autotronic Controls Corporation

Revised 03/07

Printed in U.S.A.

# **MSD** **IGNITION** **INSTALLATION INSTRUCTIONS**

## **MSD Pro-Clamp Separator Kit PN 8843**

### **Parts Included:**

- 2 - Four wire assemblies
- 2 - Three wire assemblies
- 4 - Two wire assemblies

The top cover of the MSD Separator easily pries off with a medium size flat screwdriver or even a coin. Each wire fits securely in the grooves then the cover snaps back into place.

There is a mounting hole in each Separator so they can be retained with a screw to a bracket. Note the raised tab on the base that will keep the Separator straight when bolting it in place.



**MSD IGNITION** • [WWW.MSDIGNITION.COM](http://WWW.MSDIGNITION.COM) • (915) 857-5200 • FAX (915) 857-3344

FRM28453

© 2007 Autotronic Controls Corporation

Revised 03/07

Printed in U.S.A.